


REMOVAL

1. REMOVE COOLING UNIT

(See page [AC-26](#))

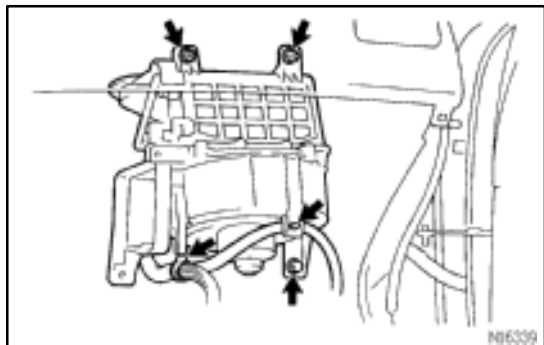

2. REMOVE BLOWER UNIT

- (a) Disconnect the connector from the blower motor.
- (b) Disconnect the air inlet damper control cable.

HINT:

At the time of installation, please refer to the following item.
For installing the control cable, refer to "INSTALLATION" of
HEATER CONTROL ASSEMBLY on page [AC-81](#).

- (c) Disconnect the wire harness clamps from blower unit.

HINT:

At the time of installation, please refer to the following item.

Do not reuse the 2 nuts.

- (d) Remove the 2 nut, bolt and the blower unit.