

INSTALLATION

1. INSTALL COMPRESSOR

- (a) Install the compressor with 3 bolts.

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

- (b) Connect the connector.

2. CONNECT DISCHARGE AND SUCTION HOSES

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

NOTICE:

Hose should be connected immediately after the caps have been removed.

HINT:

Lubricate 2 new O-rings with compressor oil and install the tubes.

3. INSTALL AND CHECK DRIVE BELT (See page [AC-16](#))

4. INSTALL ENGINE UNDER COVER

5. CONNECT NEGATIVE (–) TERMINAL CABLE TO BATTERY

6. EVACUATE AIR FROM REGISTRATION SYSTEM AND CHARGE SYSTEM WITH REFRIGERANT

Specified amount: 600 ± 50 g (21.16 ± 1.76 oz.)

7. INSPECT FOR LEAKAGE OF REFRIGERANT

Using a gas leak detector, check for leakage of refrigerant.

If there is leakage, check the tightening torque at the joints.

8. INSPECT A/C OPERATION