


# COOLING FAN RELAY INSPECTION

AC20L-01

- 1. REMOVE COOLING FAN RELAY No.1, No.2 AND No.3
- 2. INSPECT COOLING FAN RELAY No. 1 (Marking: FAN) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
	3 – 4	
Apply B+ between terminals 1 and 2.	3 – 4	No continuity


If continuity is not as specified, replace the relay.

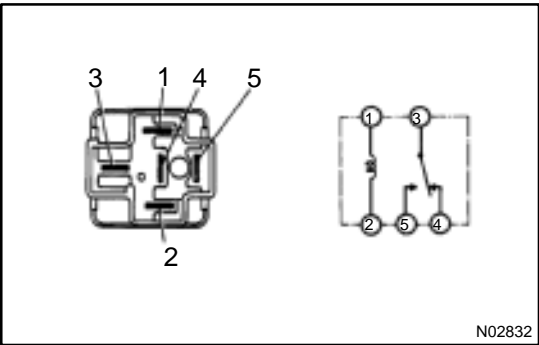

- 3. INSPECT COOLING FAN RELAY No. 2 (Marking: A.C FAN No. 2) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
	3 – 4	
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

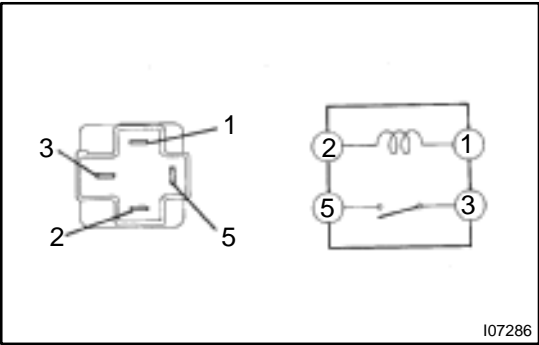

- 4. INSPECT COOLING FAN RELAY No. 3 (Marking: A.C FAN No. 3) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
	3 – 5	
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.