

DISASSEMBLY

REMOVE FAN MOTOR

- (a) Remove the 3 screws and fan.
- (b) Remove the screw and motor cover.
- (c) Disconnect the wire harness and connect from the fan shroud.
- (d) Remove the 3 screws and motor.