


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

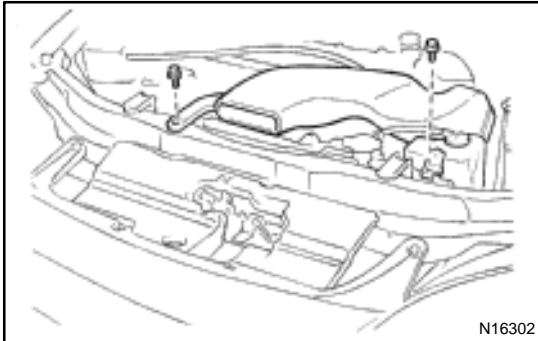

2. REMOVE THESE PARTS:

- (a) Air cleaner intake
- (b) Engine coolant reservoir tank

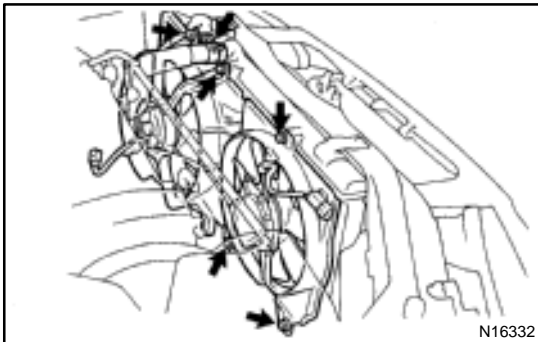

3. REMOVE CONDENSER FAN

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and radiator fan.
Torque: 7.0 N·m (70 kgf·cm, 61 in.-lbf)