

REMOVAL

1. DISCONNECT REFRIGERANT FROM REFRIGERATION SYSTEM


HINT:

At the time of reassembly, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 600 ± 50 g (21.16 ± 1.76 oz.)

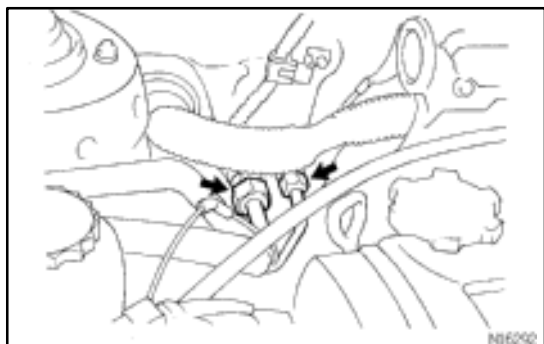

2. DISCONNECT SUCTION TUBE AND LIQUID TUBE FROM COOLING UNIT FITTINGS

Loosen the 2 nuts and disconnect the both tubes.

Torque:

Liquid tube: 14 N·m (140 kgf·cm, 10 ft·lbf)

Suction tube: 32 N·m (330 kgf·cm, 24 ft·lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.


HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install them to the tubes.


3. REMOVE LOWER FINISH PANEL

(See page [BO-54](#))

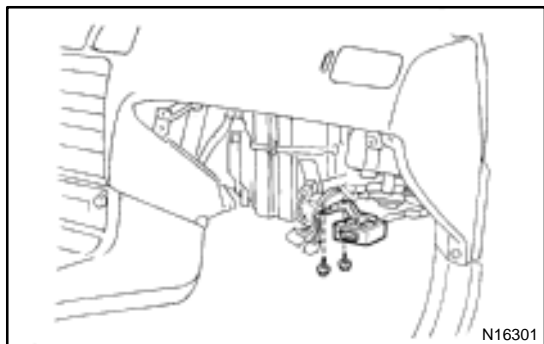

4. REMOVE A/C AMPLIFIER

- (a) Disconnect the connector.
- (b) Remove the 2 screws and amplifier.

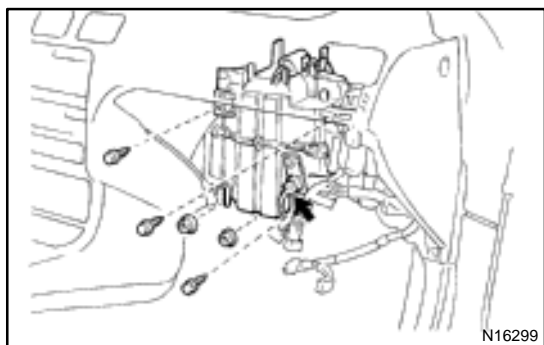

5. REMOVE COOLING UNIT

- (a) Disconnect the connector.
- (b) Remove the 3 screws, 2 nuts and the cooling unit.

HINT:

At the time of installation, please refer to the following item.

Do not reuse the 2 rivets.