



REMOVAL

REMOVE DRIVE BELT

- (a) Loosen the 2 PS pump set bolts.
- (b) Loosen the adjusting bolt.
- (c) Remove the drive belt.