


## DISASSEMBLY

### 1. PULL OUT BULB

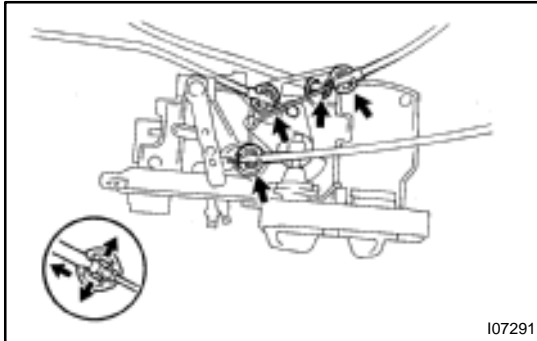

### 2. REMOVE HEATER CONTROL CABLES

- (a) Using a screwdriver, spread the claw of the cable clamp and disconnect the outer cable.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the inner cable from the heater control assembly.

### 3. REMOVE DEFROSTER MODE SWITCH

- (a) Disconnect the connector clamp.
- (b) Remove the screw and switch.