

## INSPECTION

### 1. INSPECT BLOWER SWITCH CONTINUITY


Position / Circuit	Tester connection	Specified condition
OFF	–	No continuity
LO	1 – 8	Continuity
M1	1 – 3 – 8	Continuity
M2	1 – 2 – 8	Continuity
HI	1 – 6 – 8	Continuity
Illumination circuit	4 – 5	Continuity

Switch continuity:

If continuity is not as specified, replace the heater control assembly.

Illumination operation:

If continuity is not as specified, replace the bulb.

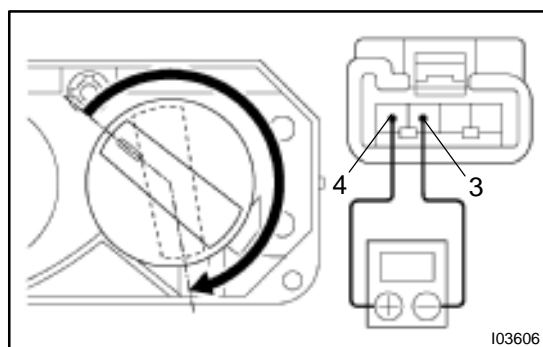

### 2. INSPECT DEFROSTER MODE SWITCH OPERATION

Turn the mode dial to DEF. position, then check that the continuity exists between terminals 3 and 4.

If no continuity exists, replace the switch.