


## INSTALLATION

Installation is in the reverse order of removal (See page [AC-76](#)).


**1. SET HEATER CONTROL DIALS AND LEVER IN THESE CONDITIONS:**

- (a) Air inlet control lever "RECIRC" position.
- (b) Mode control dial "FACE" position
- (c) Temperature control dial "COOL" position

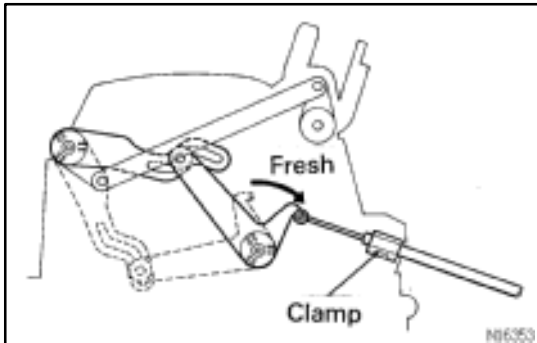


**2. ADJUST AIR INLET DAMPER CONTROL CABLE**

Set the air inlet damper on "RECIRC" position and install the control cable and lock clamp.

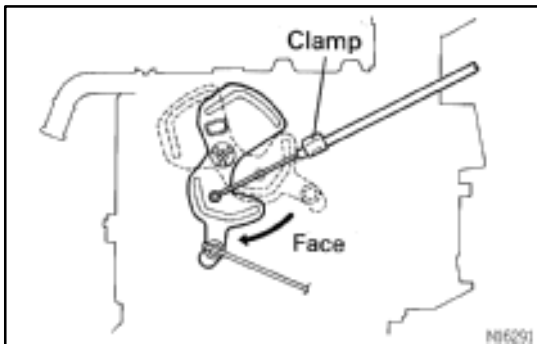

**3. ADJUST MODE DAMPER CONTROL CABLE**

Set the air inlet damper on "FACE" position and install the control cable and lock the clamp.

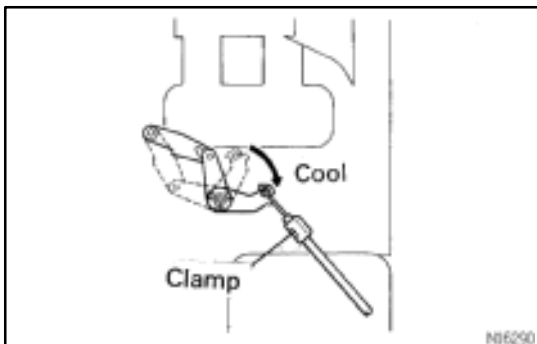

**4. ADJUST AIR MIX DAMPER CONTROL CABLE**

Set the air mix damper on "COOL" position and install the control cable and lock the clamp.