



## HEATER CONTROL ASSEMBLY ON-VEHICLE INSPECTION

AC1FG-01

### INSPECT HEATER CONTROL LEVER OPERATION

Move the control lever and left and right then check that click should can be heard or recoil is felt.

If click sound can not be heard or recoil is felt,adjust the control cable or check control cable and heater control assembly.