


REMOVAL

1. REMOVE THESE PARTS:

- (a) Cowl side trim
- (b) Scaff plate
- (c) Glove compartment parts
- (d) Lower finish panel
- (e) Center cluster finish panel

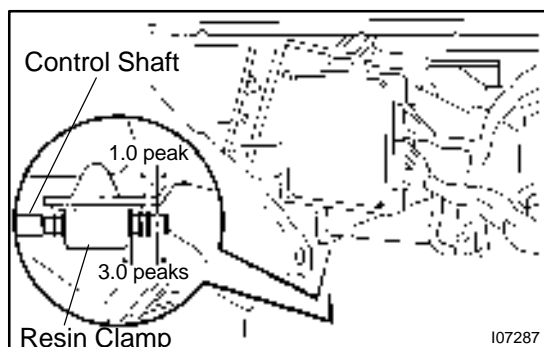


2. DISCONNECT HEATER CONTROL CABLE

- (a) Set temperature control to "COOL" position.
- (b) Remember the number of the control shaft portion sticking up from the resin clamp.


HINT:


Incase of the illustration to the left, it has 3.0 peaks.

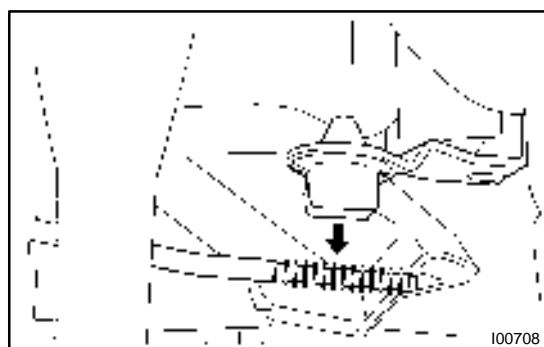


- (c) Disconnect the control shaft from the resin clamp.

3. DISCONNECT A/C CONTROL CABLES

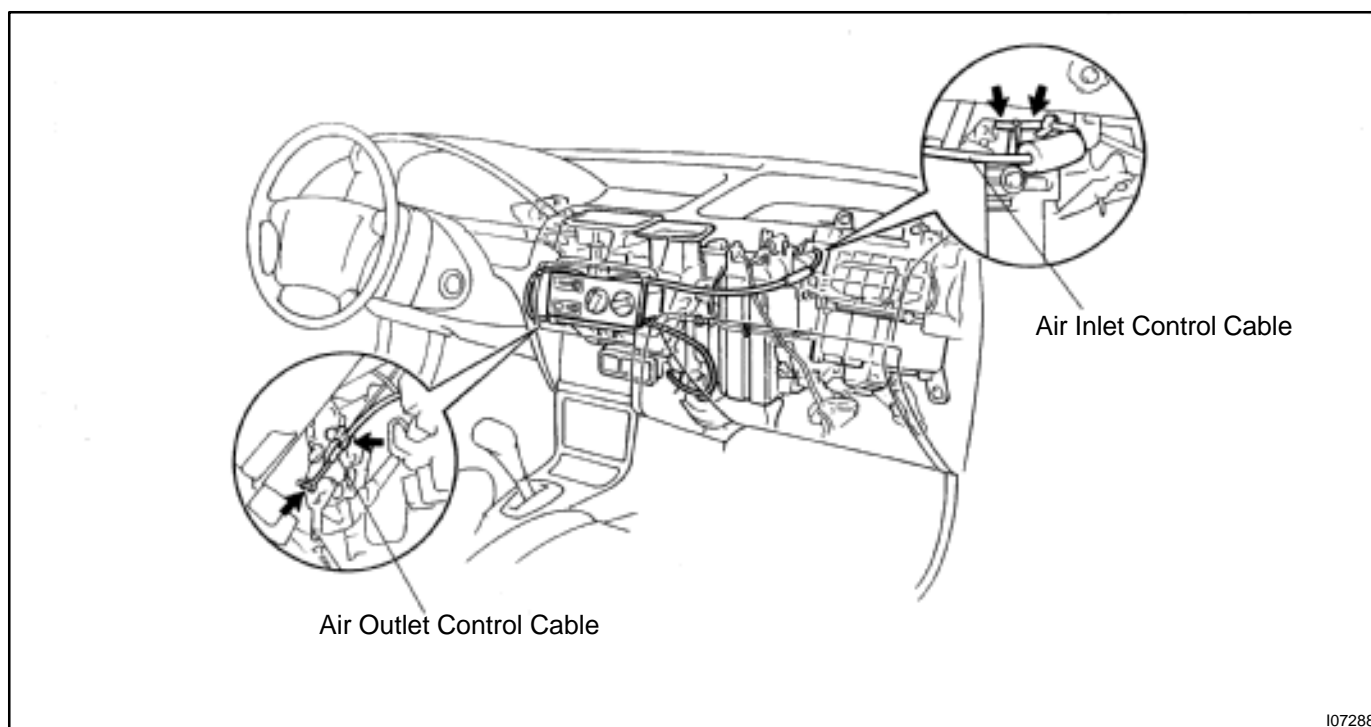

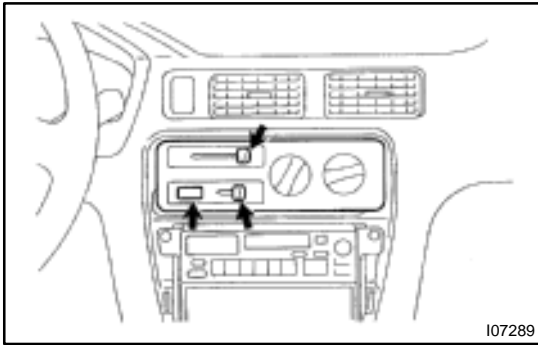**4. REMOVE HEATER CONTROL ASSEMBLY**

- (a) Remove the heater control knobs.
- (b) Using pliers, pull out the A/C switch.
- (c) Remove the heater control panel.

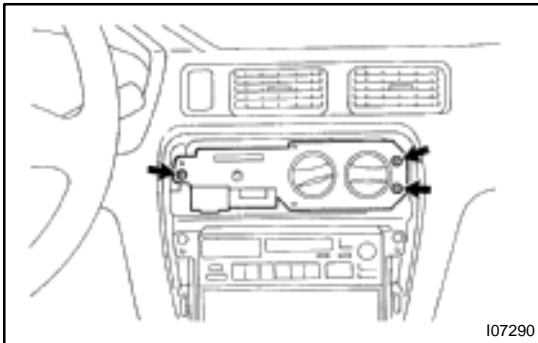

- (d) Remove the 3 screws and pull out the A/C control assembly, then disconnect the connector.