

## DISASSEMBLY

### 1. REMOVE DEFROSTER NOZZLE


Remove the screw and nozzle.

### 2. REMOVE AIR VENT DUCT

- (a) Disconnect the air vent control link.
- (b) Remove the 2 screws and duct.

### 3. REMOVE HEATER COVER

Remove the 3 screws and cover.

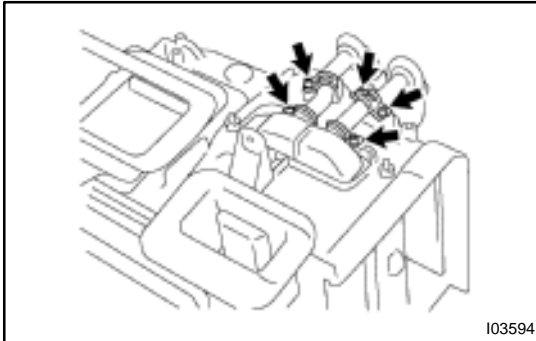

### 4. REMOVE HEATER RADIATOR

- (a) Remove the 3 screws and 2 clamps.
- (b) Pull out the heater radiator.
- (c) Remove the 2 screws, 2 clamps and 2 heater radiator pipes.

HINT:

Do not reuse the 2 O-rings.