


## REMOVAL

1. **REMOVE COOLING UNIT**  
(See page [AC-26](#))
2. **DRAIN ENGINE COOLANT FROM RADIATOR**

HINT:

It is not necessary to drain out all the coolant.

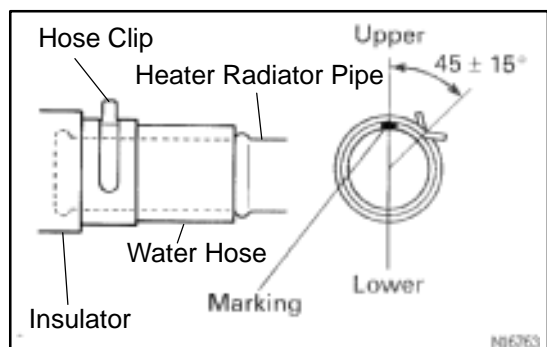


3. **DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES**

HINT:

At the time of installation, please refer to the following items.

- Push the water hose onto the heater radiator pipe as far as the second ridge on the pipe.
- Install the hose clip in a position, as shown in the illustration.

4. **REMOVE PIPE GROMMETS**
5. **REMOVE INSTRUMENT PANEL SAFETY PAD AND REINFORCEMENT**  
(See page [BO-54](#))

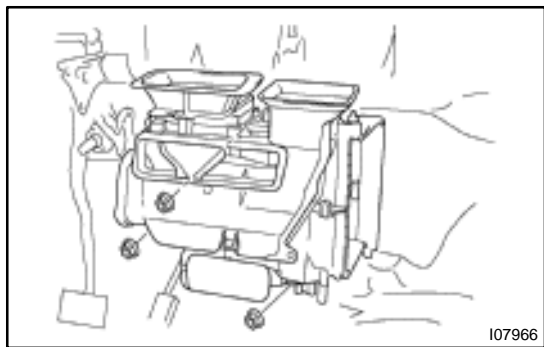

6. **REMOVE HEATER UNIT**

Remove the 3 nuts and the heater unit.

HINT:

At the time of installation, please refer to the following items.

Do not reuse the 2 nuts.