



# HEATER MAIN RELAY INSPECTION

AC20J-01

- 1. REMOVE HEATER MAIN RELAY
- 2. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 – 4 3 – 5	Continuity
Apply B+ between terminals 3 and 5.	1 – 2	Continuity

If continuity is not as specified, replace the relay.

- 3. INSTALL HEATER MAIN RELAY