



MAGNETIC CLUTCH RELAY INSPECTION

AC20K-01

1. REMOVE MAGNETIC CLUTCH RELAY FROM COOLING UNIT
2. INSPECT MAGNETIC CLUTCH RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3	Continuity
Apply B+ between terminals 1 and 3.	2 – 4	Continuity

If continuity is not as specified, replace the relay.