

## REMOVAL

### 1. DISCHARGE REFRIGERANT FROM REFRIGERANT SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

**Specified amount: 600 ± 50 g (21.17 ± 1.76 oz.)**

### 2. REMOVE PRESSURE SWITCH

- (a) Disconnect the connector.
- (b) Remove the pressure switch from the liquid tube.

**Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)**

HINT:

- Lock the switch mount on the tube with an open end wrench, being careful not to deform the tube, and remove the switch.
- At the time of installation, please refer to the following item.  
Lubricate a new O-ring with compressor oil and install them to the switch.