


REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of reassembly, please refer to the following item.
Evacuate air from refrigeration system. Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 600 ± 50 g (21.16 ± 1.76 oz.)

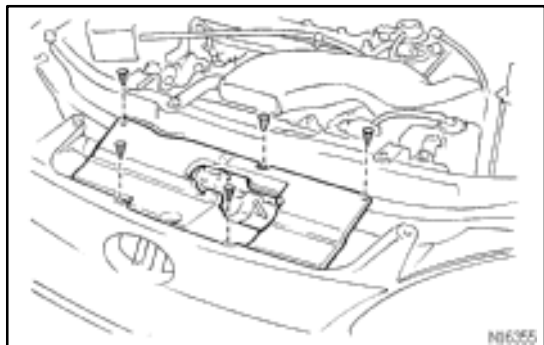

2. REMOVE RADIATOR UPPER SEAL

3. DISCONNECT 2 LIQUID TUBES FROM RECEIVER

Remove the 2 bolts and both tubes.


Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

NOTICE:

Cap the open fittings immediately to keep moisture dirt out of the system.

HINT:

At the time of reassembly, please refer to the following item.
Lubricate 2 new O-rings with compressor oil and install the tubes.

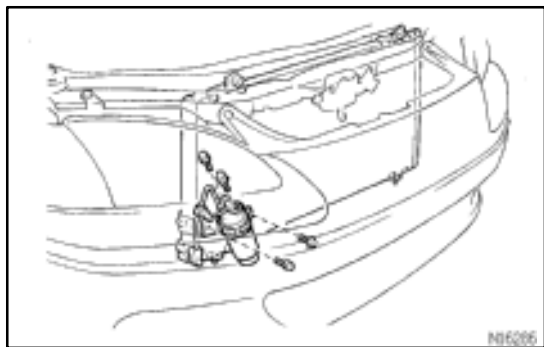

4. REMOVE RECEIVER

Remove the holder bolt and pull the receiver upward from the receiver holder.

HINT:

At the time of reassembly, please refer to the following item.
If receiver was replaced, add compressor oil to compressor.

Add 10 cc (0.4 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent

5. REMOVE RECEIVER HOLDER

Remove the bolt and holder.