



INSTALLATION

1. TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure the distance from the installed surface to the front surface of the transaxle housing.

Correct distance: More than 13.4 mm (0.528 in.)

2. TRANSAXLE INSTALLATION

Installation is in the reverse order of removal (See page [AX-17](#)).

HINT:

At the time of installation, please refer to the following items.

- ATF level (See page [DI-126](#)).
- Front wheel alignment (See page [SA-4](#)).
- Road test the vehicle (See page [DI-126](#)).