



## THROTTLE CABLE ON-VEHICLE REPAIR

AX098-01


1. DISCONNECT THROTTLE CABLE FROM THROTTLE LINKAGE
2. REMOVE PARK/NEUTRAL POSITION SWITCH  
(See page AX-4)

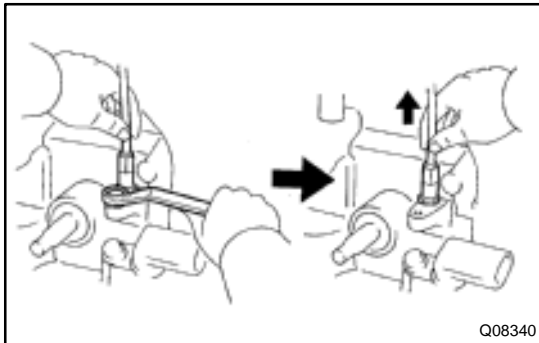

3. REMOVE THROTTLE CABLE RETAINING PLATE  
Remove the bolt and plate.
4. REMOVE THROTTLE CABLE FROM VALVE BODY  
(See page AX-5)
5. REMOVE THROTTLE CABLE FROM CASE  
Pull out the throttle cable.
6. INSTALL THROTTLE CABLE TO CASE
7. INSTALL THROTTLE CABLE TO VALVE BODY  
(See page AX-5)
8. INSTALL THROTTLE CABLE RETAINING PLATE  
Install the bolt and plate.
9. INSTALL PARK/NEUTRAL POSITION SWITCH  
(See page AX-4)

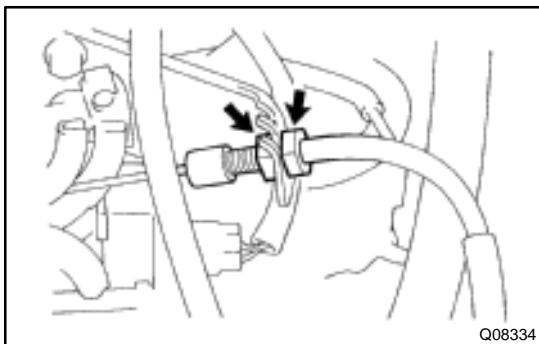

10. CONNECT THROTTLE CABLE TO THROTTLE LINKAGE

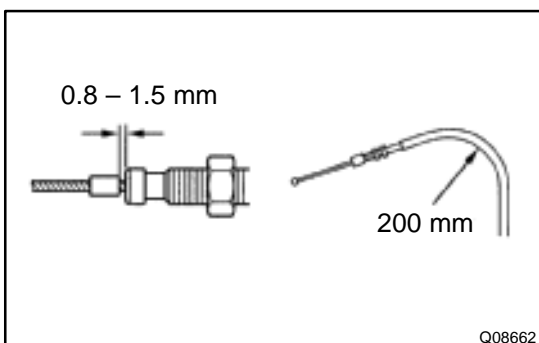

11. IF THROTTLE CABLE IS NEW, STAKE THE STOPPER ON INNER CABLE

### HINT:

New cable does not have a cable stopper staked.

- (a) Bend the cable so there is a radius of about 200 mm (7.87 in.).
- (b) Pull the inner cable lightly until a slight resistance is felt, and hold it.
- (c) Stake the stopper so that the distance from the end of outer cable to the stopper is 0.8 – 1.5 mm (0.031 – 0.059 in.).