



AX09H-02

VEHICLE SPEED SENSOR ON-VEHICLE REPAIR

1. REMOVE NO.2 VEHICLE SPEED SENSOR

- (a) Disconnect the No.2 vehicle speed sensor connector.
- (b) Remove the bolt and locking plate.
- (c) Pull out the No.2 vehicle speed sensor.
- (d) Remove the 2 bolts, plate and cover.
- (e) Pull out the rotor.

2. INSTALL NO.2 VEHICLE SPEED SENSOR

- (a) Install the rotor.
- (b) Install the cover, plate and 2 bolts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)
- (c) Install the No.2 vehicle speed sensor.
- (d) Install the locking plate and bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)
- (e) Install the No.2 vehicle speed sensor connector.