



## CIRCUIT

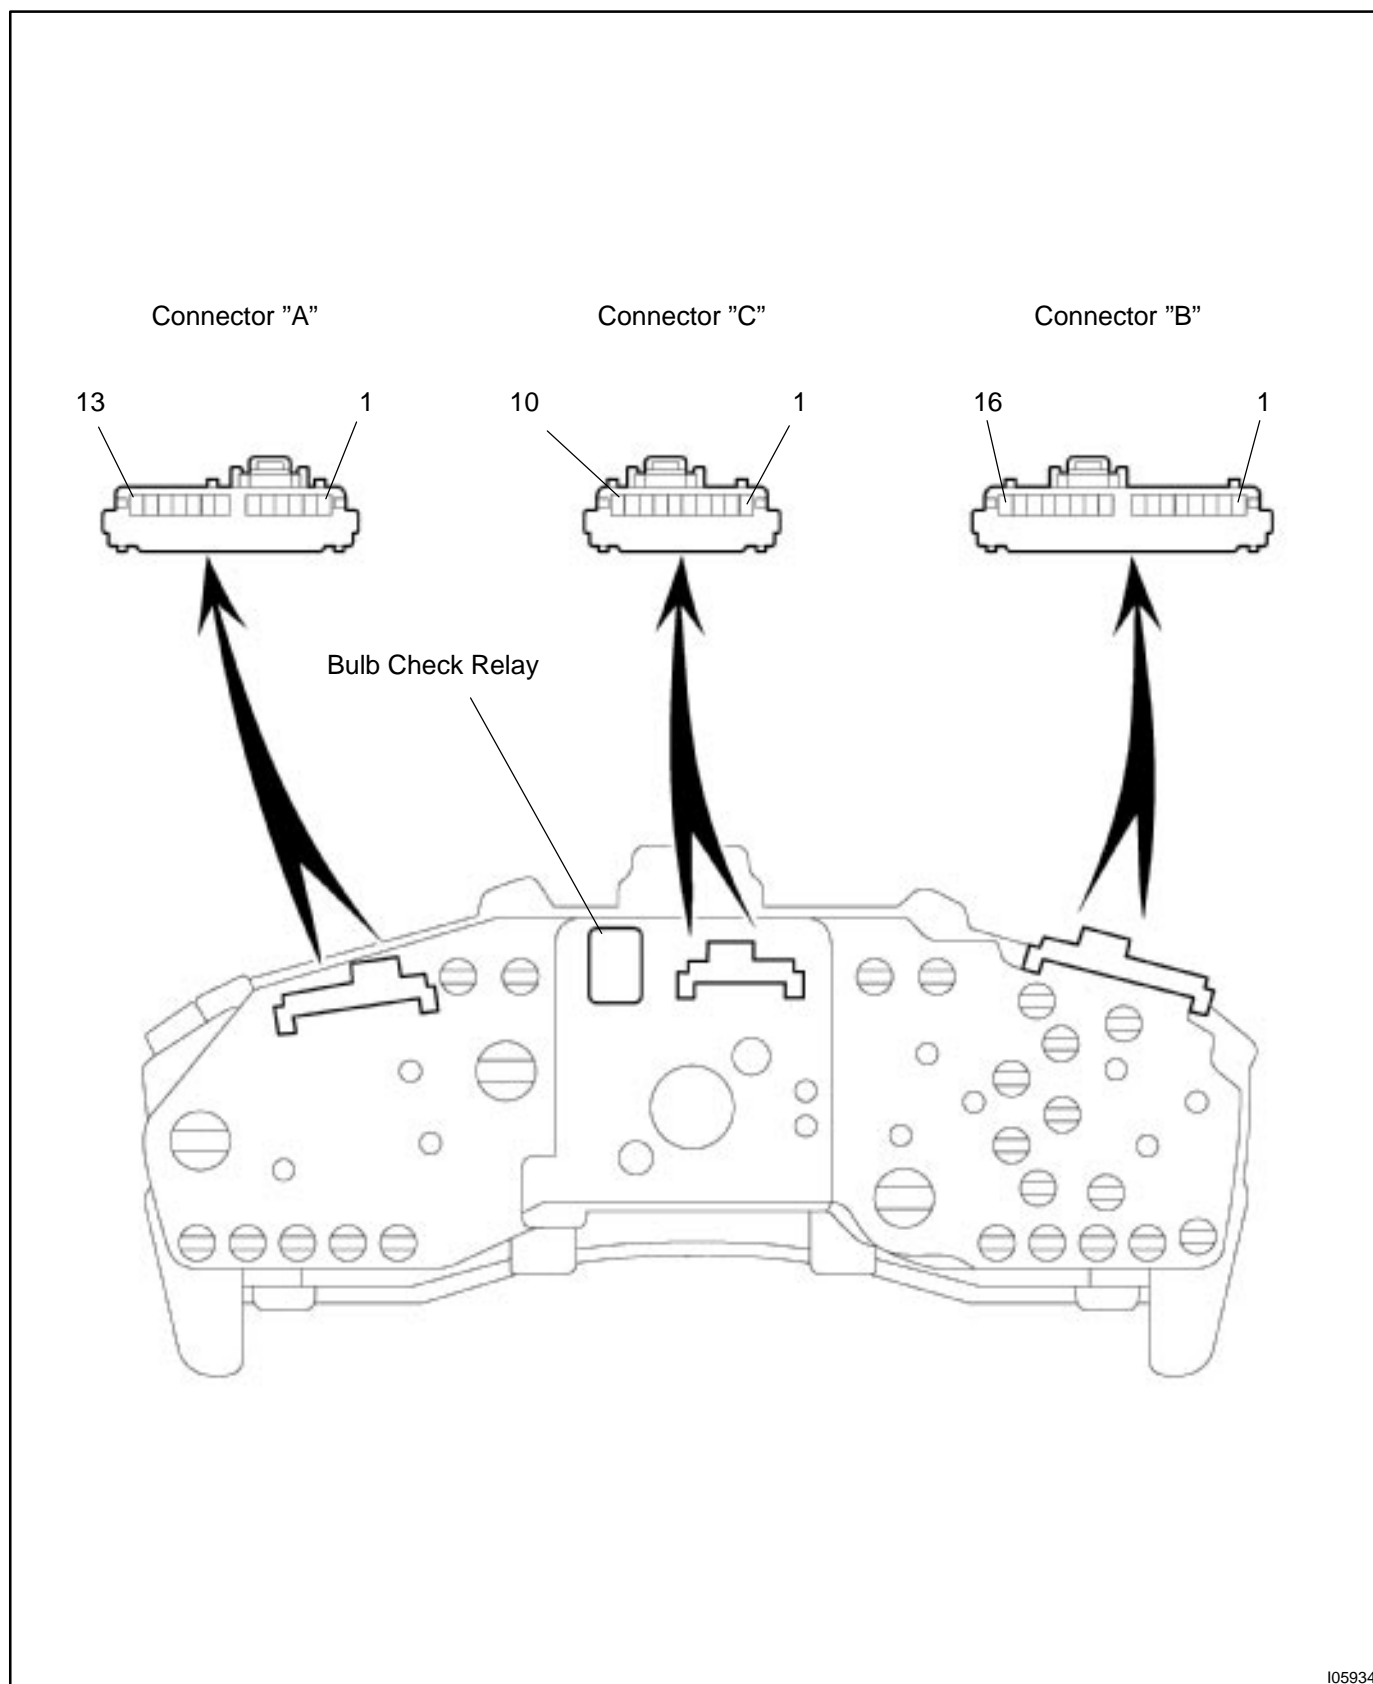

I05934

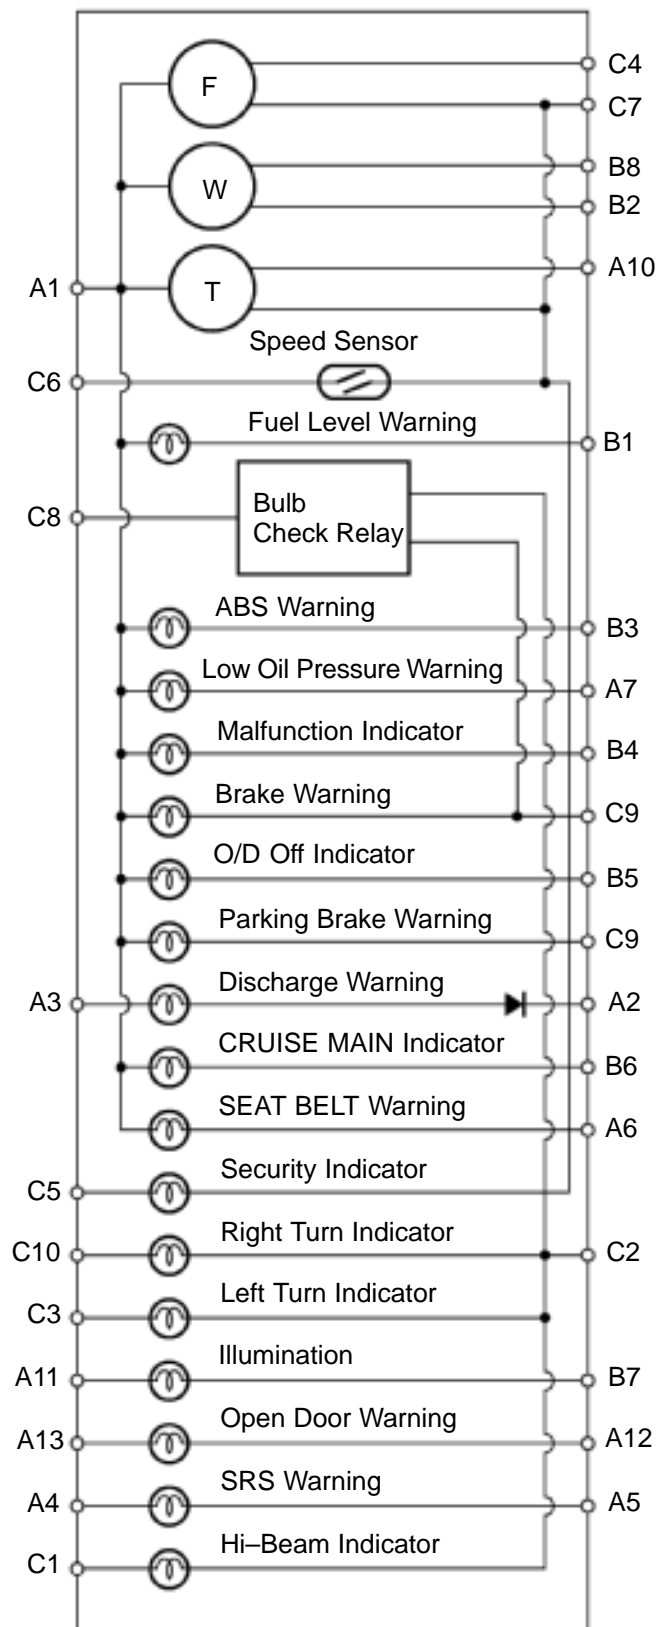

| No. | Wiring Connector Side                                       |
|-----|---|
| A   | 1 GAUGE Fuse  |
|     | 2 Generator   |
|     | 3 IGN Fuse  |
|     | 4 SRS Fuse  |
|     | 5 Airbag Sensor Assembly                                    |
|     | 6 Seat Belt Buckle Switch                                   |
|     | 7 Low Oil Pressure Warning Switch                           |
|     | 10 Igniter  |
|     | 11 TAIL Fuse  |
|     | 12 Door Courtesy Switch                                     |
|     | 13 DOME Fuse  |
| B   | 1 Fuel Level Warning Switch                                 |
|     | 2 Engine Coolant Temperature Sender Gauge                   |
|     | 3 ABS ECU   |
|     | 4 ECM   |
|     | 5 O/D Off Switch  |
|     | 6 Cruise Control ECU  |
|     | 7 Ground  |
|     | 8 Ground  |
| C   | 1 Headlight Switch  |
|     | 2 Ground  |
|     | 3 Turn Signal Switch (Left)                                 |
|     | 4 Fuel Sender Gauge   |
|     | 5 Theft Deterrent ECU                                       |
|     | 6 Speed Control Unit  |
|     | 7 Ground  |
|     | 8 Starter Relay   |
|     | 9 Brake Fluid Level Warning Switch and Parking Brake Switch |
|     | 10 Turn Signal Switch (Right)                               |

Ⓕ : Fuel Sender Gauge

Ⓖ : ECT Sender Gauge

Ⓓ : Tachometer