



**INSPECTION**  
**INSPECT STOP LIGHT SWITCH CONTINUITY**

Condition	Tester connection	Specified condition
Brake pedal depressed (Switch pin free)	1 – 2	Continuity
Brake pedal released (Switch pin pushed in)	–	No continuity

If continuity is not as specified, replace the switch.