

CLIP

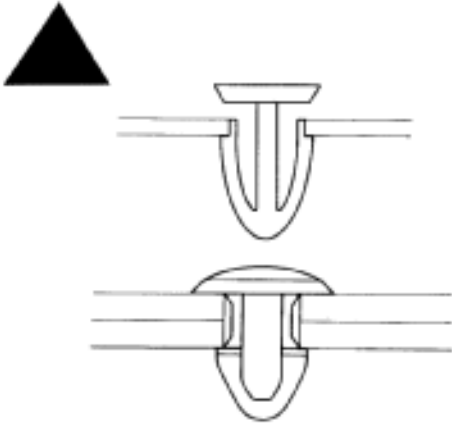
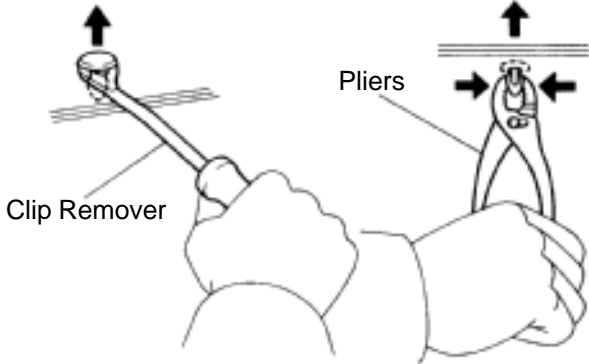
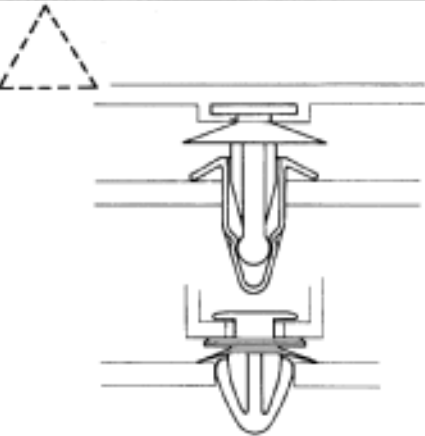
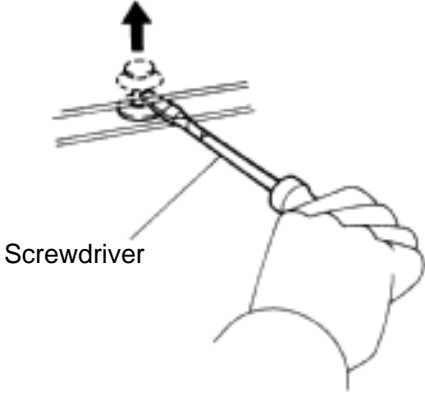
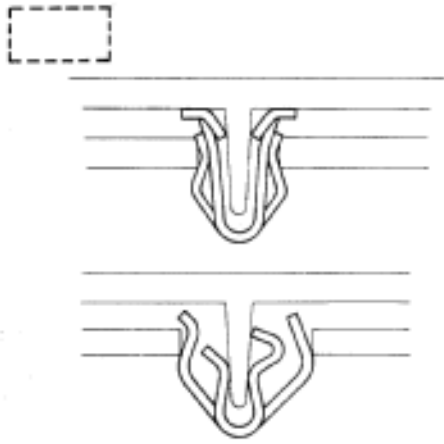
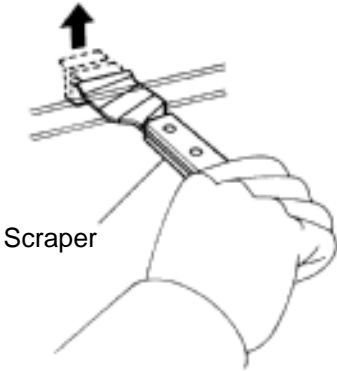
REPLACEMENT

BO0VU-04


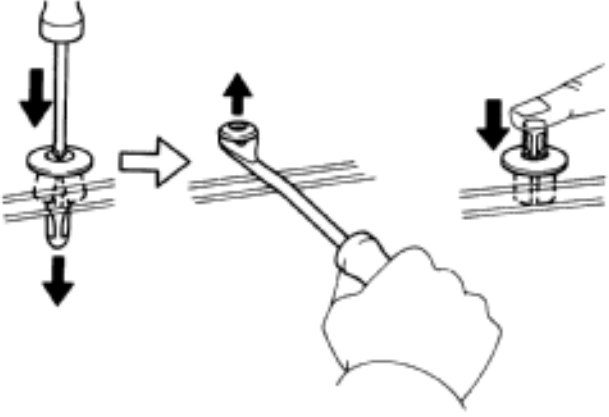
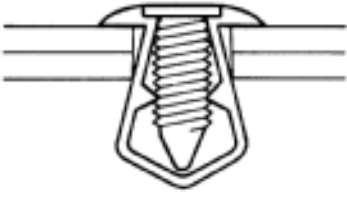
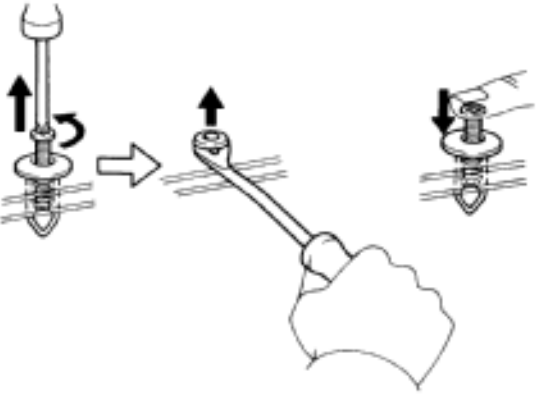
The removal and installation methods of typical clips used in body parts are shown in the table below.

HINT:

If the clip is damaged during the operation, always replace it with a new clip.

| Shape (Example) | Removal/Installation |
|---|--|
|  |  |
|  |  |
|  |  |

V00005

| Shape (Example) | Removal/Installation |
|--|--|
|  | <p data-bbox="858 315 963 342">Removal</p> <p data-bbox="1182 315 1310 342">Installation</p>  |
|  | <p data-bbox="882 813 987 840">Removal</p> <p data-bbox="1222 813 1350 840">Installation</p>  |

V00012