


## ADJUSTMENT

### 1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Using SST, adjust the door by loosening the body side hinge bolts.

SST 09812-00010

**Torque: 25 N·m (260 kgf-cm, 19 ft-lbf)**

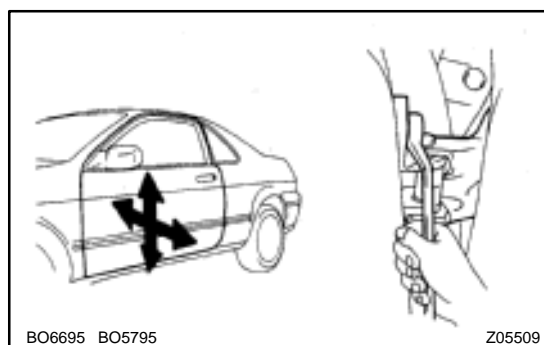

### 2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS


Loosen the door side hinge bolts to adjust.

HINT:

Substitute the bolt with washer for the centering bolt.

(See page [BO-6](#))

**Torque: 25 N·m (260 kgf-cm, 19 ft-lbf)**

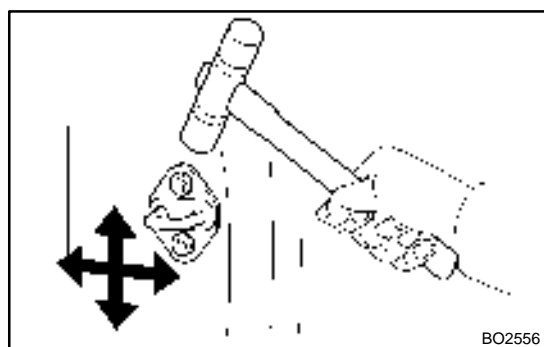

### 3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Loosen the striker mounting screws to adjust the striker.
- Using a plastic hammer, tap the striker to adjust it.