



DISASSEMBLY

1. REMOVE THESE PARTS:

- (a) w/ Vertical adjuster:
Vertical adjuster knob
- (b) Reclining adjuster release lever




- (c) Outer shield

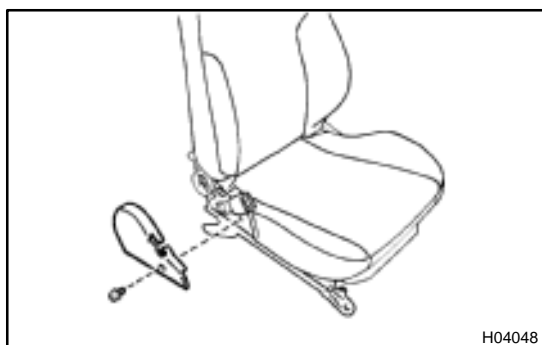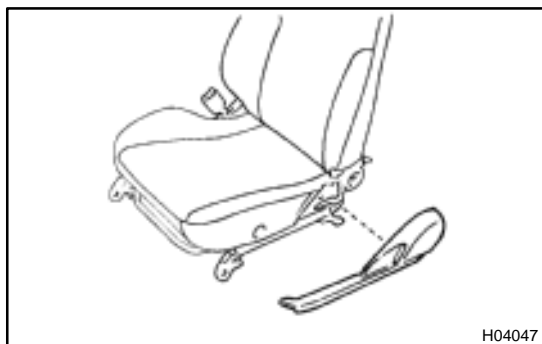

2. REMOVE INNER SHIELD

- (a) Remove the screw.
- (b) Remove the inner shield.

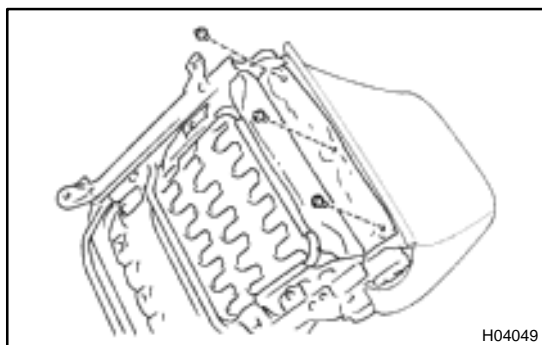


3. REMOVE SEATBACK ASSEMBLY

- (a) Remove the 3 clips.
- (b) Remove the hog rings.
- (c) Remove the 4 bolts.
- (d) Remove the seatback assembly.

4. REMOVE SEATBACK COVER

- (a) Remove the seatback frame from the seatback cover with pad.
- (b) Remove the seatback cover from the seatback pad.

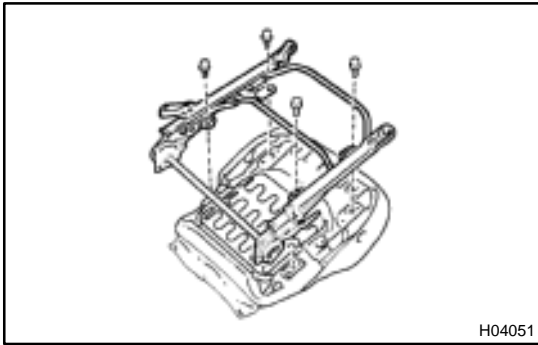**5. REMOVE SEAT CUSHION ASSEMBLY**

Remove the 4 bolts and seat cushion assembly from the seat adjuster.

6. REMOVE SEAT CUSHION COVER

- (a) Remove the seat cushion pad with cover from the seat cushion frame.
- (b) Remove the seat cushion cover from the seat cushion pad.

7. REMOVE THESE PARTS:

- (a) Seat belt
- (b) Reclining connecting pipe
- (c) Seat track handle