



REMOVAL

1. REMOVE THESE PARTS:

- (a) Wiper arms

Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)

- (b) Cowl louver

2. REMOVE WIPER MOTOR

- (a) Disconnect the connector, then unfasten the 4 bolts.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (b) Connect the claw of the wiper link to the panel.

- (c) Disconnect the motor from the wiper link and remove it.

3. REMOVE THESE PARTS:

- (a) Wiper link

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (b) Window washer nozzle