


DISASSEMBLY

1. REMOVE THESE PARTS:

- (a) Defroster nozzle
- (b) No.3 heater to register duct
- (c) No.1 heater to register duct
- (d) No.1 register
- (e) No.3 register
- (f) No.2 register

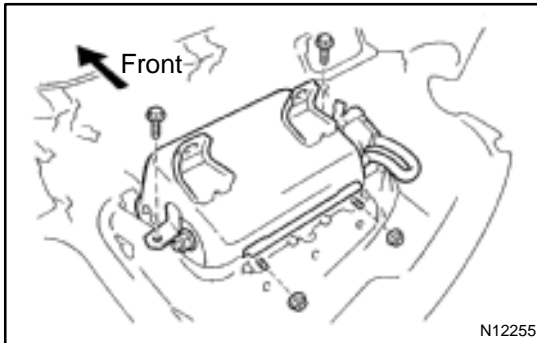

2. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 bolts, 2 nuts and the front passenger airbag assembly.

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

- (b) Remove the airbag door.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment direction facing down.
- Never disassemble the front passenger airbag assembly.

NOTICE:

- When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.
- When installing the instrument panel box, carefully pull out the airbag wire harness from the glove compartment upper hole.

3. REMOVE THESE PARTS:

- (a) Center bracket
- (b) Lower RH panel
- (c) Lower LH panel
- (d) Instrument panel wire