


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND LEFT/RIGHT DIRECTIONS

- Adjust the door by loosening the door hinge bolts.
Torque: 7.4 N·m (75 kgf·cm, 65 in.-lbf)
- For vertical adjustment of front end of door, increase or decrease the number of washers.

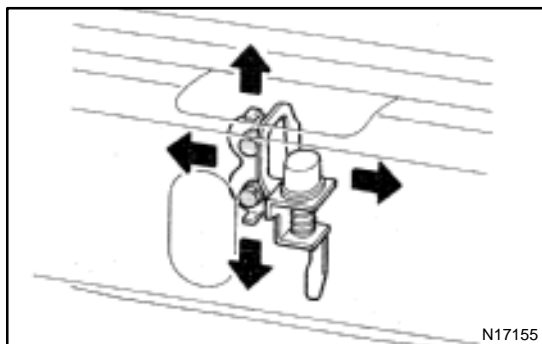

2. ADJUST DOOR LOCK STRIKER

Loosen the mounting bolts to adjust the lock striker.