

DISASSEMBLY

1. REMOVE LUGGAGE COMPARTMENT DOOR TRIM

- (a) Remove the 6 clips.
- (b) Remove the luggage compartment door trim.

2. REMOVE DOOR LOCK CYLINDER

- (a) Disconnect the link.
- (b) Remove the 2 nuts and door lock.

3. REMOVE LICENSE PLATE

- (a) Remove the 2 nuts.
- (b) Remove the license plate light.

4. REMOVE DOOR LOCK

- (a) Disconnect the wire.
- (b) Remove the 2 bolts and the door lock.