

## REMOVAL


### 1. REMOVE LUGGAGE COMPARTMENT DOOR

- (a) Disconnect the connector.
- (b) Using a clip remover, disconnect the clamps.
- (c) Remove the 4 bolts and door.

**Torque: 7.4 N·m (75 kgf·cm, 65 in.-lbf)**


### 2. REMOVE THESE PARTS:

- (a) Rear floor finish plate
- (b) Luggage compartment floor mat
- (c) Rear luggage compartment trim cover
- (d) Inner luggage compartment trim cover
- (e) High-mounted stop light
- (f) Package tray trim
- (g) Rear seat
- (h) Front door scuff plate
- (i) Quarter trim

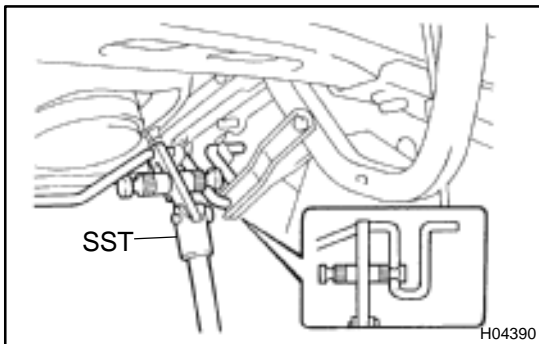


### 3. REMOVE TORSION BAR

- (a) Install SST to the torsion bar on the hinge side.  
SST 09804-24010

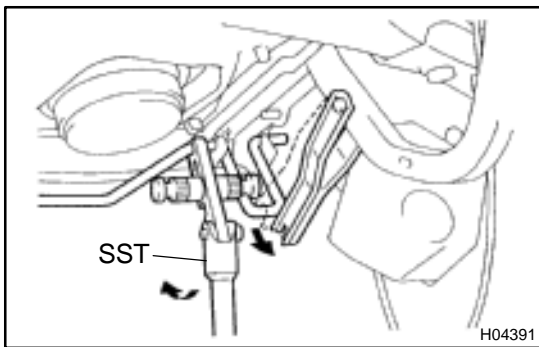

- (b) Push down on SST, and pull the luggage compartment door hinge from the torsion bar.

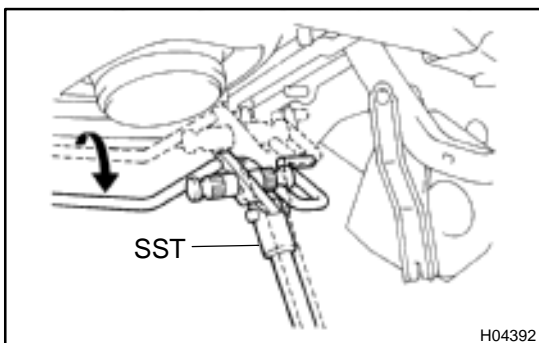

- (c) Slowly lift SST, and remove the torsion bar from the torsion bar bracket with SST.
- (d) Remove the torsion bar.
- (e) Do the same for the other side.