


REMOVAL


1. REMOVE THESE PARTS:

- (a) Rear seatback and seat cushion
- (b) Front pillar garnishes
- (c) Door scuff plate
- (d) Front seat belt floor anchor and shoulder anchor
- (e) Rear seat belt floor anchor

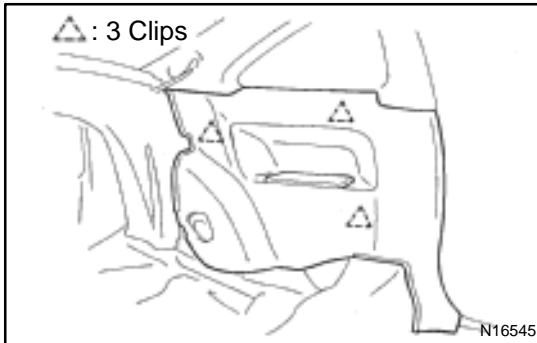


2. REMOVE QUARTER TRIM

Remove the quarter trim by pulling it.

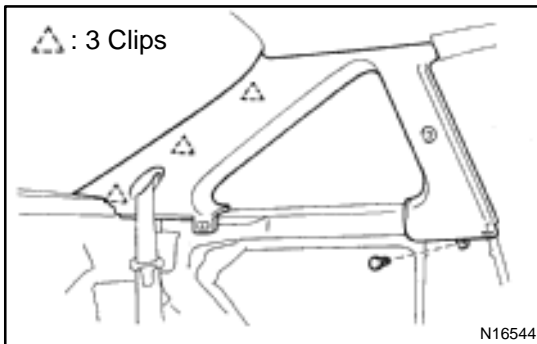

3. REMOVE ROOF SIDE INNER GARNISH

- (a) Remove the clip.
- (b) Remove the garnish by pulling it.

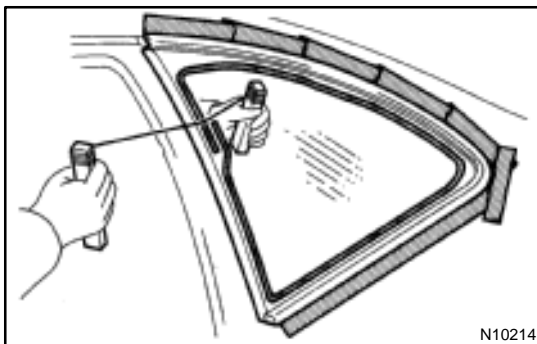

4. REMOVE QUARTER WINDOW GLASS

- (a) Push piano wire through between body and glass from the interior.
- (b) Tie both wire ends to a wooden block or similar object.

HINT:

Apply adhesive tape to the outer surface to keep the surface from being scratched.


NOTICE:


When separating the glass, take care not to damage the paint and exterior.

- (c) Cut the adhesive by pulling the piano wire around it.

HINT:

Cut the adhesive areas as shown in the illustration, leaving the adhesive where the pins are.

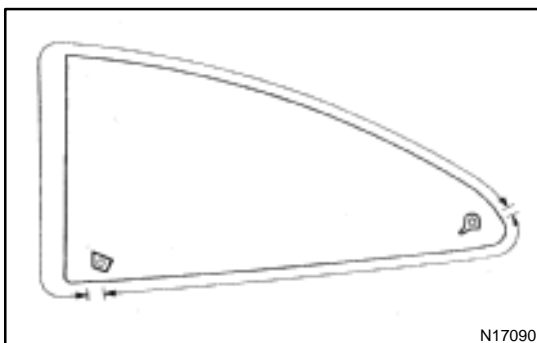

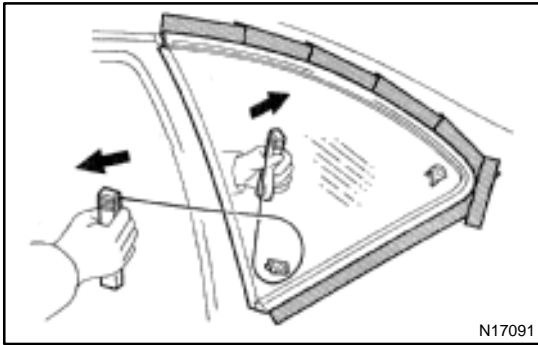

- (d) Using piano wire as shown in the illustration, cut off the rest of the adhesive.
- (e) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.