

DISASSEMBLY

1. REMOVE REAR SEATBACK LOCK COVER

- (a) Remove the screw.
- (b) Remove the cover.

2. REMOVE REAR SEATBACK LOCK

- (a) Remove the 5 clips.
- (b) Remove the 2 bolts.
- (c) Remove the rear seatback lock.

3. REMOVE SEATBACK COVER

- (a) Remove the hog rings and seatback frame from the seatback cover with pad.
- (b) Remove the seatback cover from the seatback pad.