

REMOVAL

1. REMOVE SEAT CUSHION ASSEMBLY

- (a) Remove the seat cushion assembly.

HINT:

Remove the rear seat inner with center belt from seat cushion slit to remove the seat cushion.

- (b) Remove the 2 lock hooks.

2. REMOVE SEATBACK ASSEMBLY

- (a) Release lock to lean the seatback to front.
- (b) Remove the 2 bolts and seatback assembly.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

3. REMOVE SEATBACK HINGE

- (a) Remove the 2 bolts and LH seatback hinge.
- (b) Remove the 2 bolts and RH seatback hinge.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)