


ADJUSTMENT


1. DISCONNECT LOCK HANDLE FROM LOCK BASE

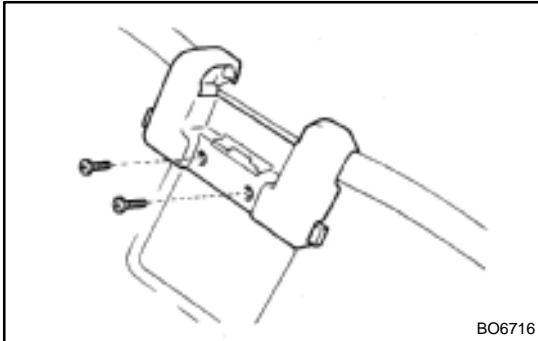

2. REMOVE LOCK GARNISH

Remove the 2 screws and the lock garnish.

3. CONNECT LOCK HANDLE TO LOCK BASE

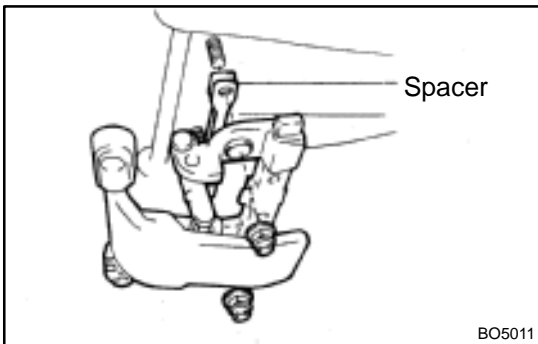

4. ADJUST REMOVABLE ROOF

- (a) Remove the 2 nuts and the lock base.
- (b) Adjust by increasing or decreasing the number of spacers.
- (c) Install the lock base with the 2 nuts.

5. INSTALL LOCK GARNISH

Install the lock garnish with the 2 screws.