


BO5008

REMOVABLE ROOF ON-VEHICLE INSPECTION

BO1GE-01

INSPECT REMOVABLE ROOF ALIGNMENT

- (a) With the removable roof installed, check for water leakage.

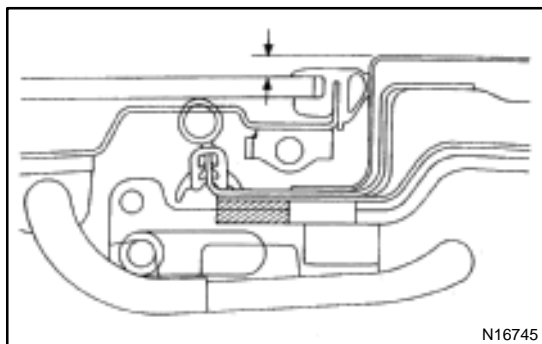

N16745

- (b) Check for a difference in level between the removal roof and the roof panel.

Level: 2.0 ± 0.5 mm (0.079 ± 0.020 in.)