

REMOVAL


1. REMOVE SUNSHADE TRIM

2. REMOVE INTERIOR LIGHT

Using a screwdriver, remove the light, then disconnect the connector.


HINT:

Tape the screwdriver tip before use.

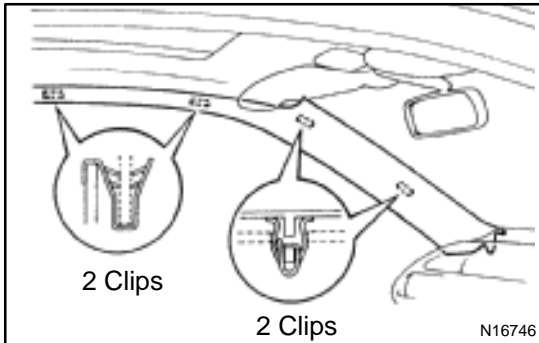


3. REMOVE THESE PARTS:

- (a) Front pillar garnish
- (b) Inner rear view mirror
- (c) Sun visors and holders
- (d) Assist grip
- (e) Coat hook

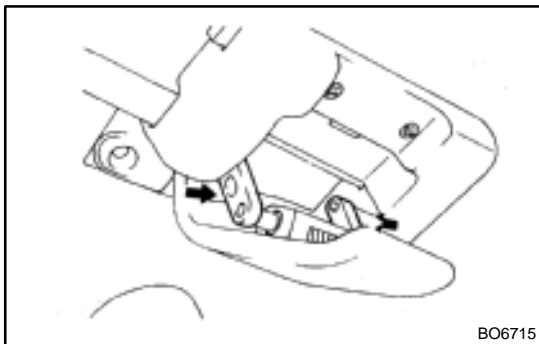


4. REMOVE REMOVABLE ROOF PANEL


- (a) Disconnect the lock handle from the lock base.

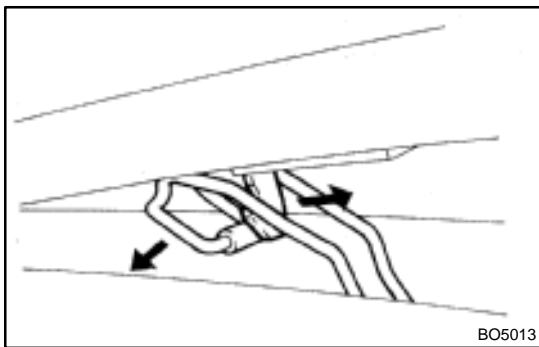

- (b) Disconnect the auxiliary catch from the removable roof.

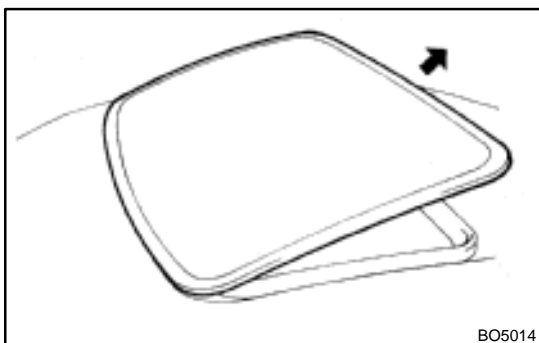


- (c) Pull the removable roof rearward to remove it.

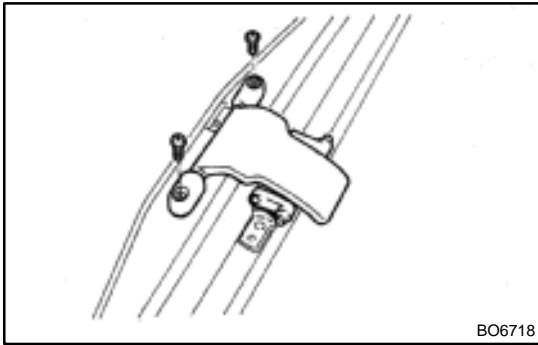


5. REMOVE LOCK HANDLE

Remove the 2 screws and the lock handle from the removable roof.

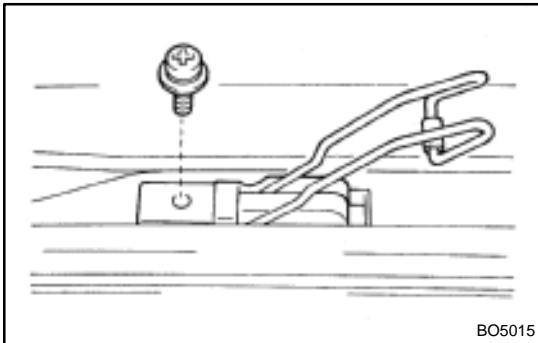

6. REMOVE AUXILIARY CATCH

Remove the screw and catch.

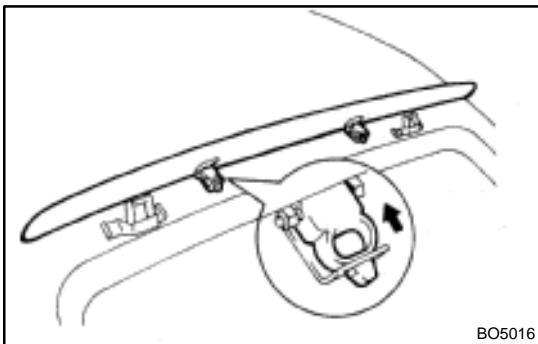


7. REMOVE WIND DEFLECTOR PANEL

Remove the 2 deflector clips while prying them with a screwdriver.


HINT:

Tape the screwdriver tip before use.

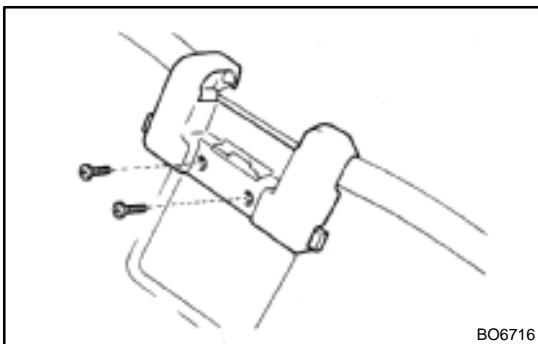



8. REMOVE LOCK GARNISH

Remove the 2 screws and the lock garnish.

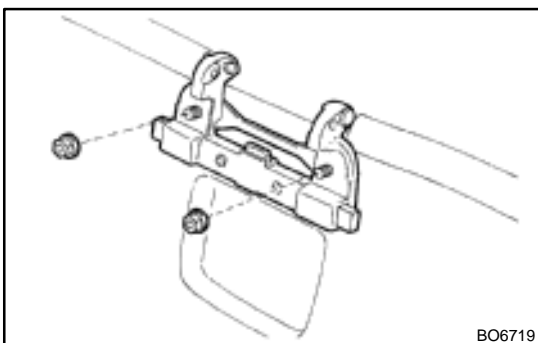


9. REMOVE LOCK BASE

Remove the 2 nuts, lock base and spacers.

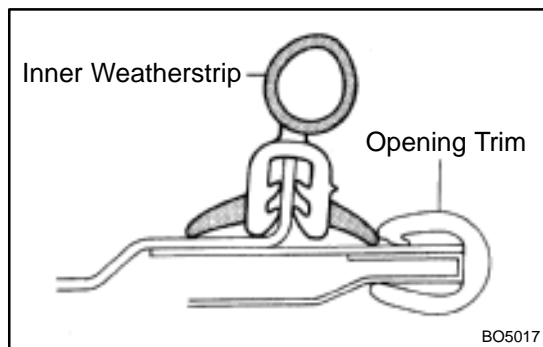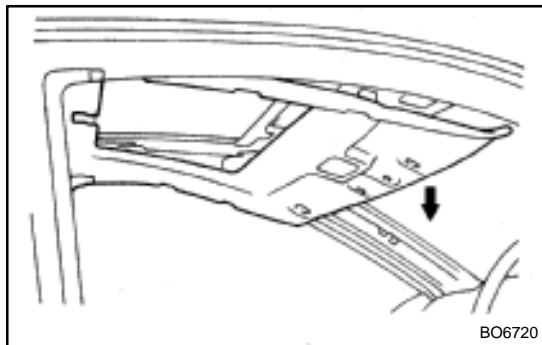**10. REMOVE OPENING TRIM****11. REMOVE INNER WEATHERSTRIP****12. REMOVE HINGE CASE**

(a) Pull down the roof headlining by hand.

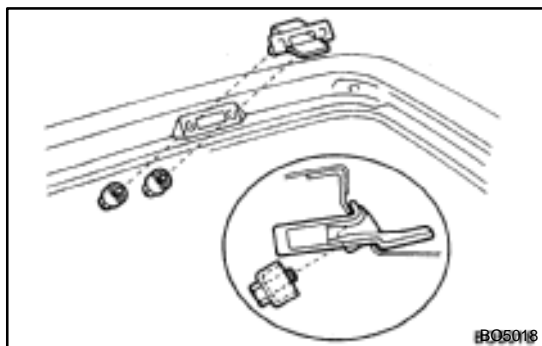

(b) Remove the 2 bolts and the hinge case.