



## REMOVAL

### 1. REMOVE THESE PARTS:

- (a) Luggage compartment floor carpet
- (b) Rear seat cushion
- (c) Rear seatback

**Torque: 18 N·m (185 kgf-cm, 13 ft-lbf)**

- (d) Front pillar garnish
- (e) Inner rear view mirror
- (f) Sun visor and holders
- (g) Assist grip
- (h) Coat hook
- (i) Door scuff plate

### 2. REMOVE INTERIOR LIGHT

Using a screwdriver, remove the light, then disconnect the connector.

**HINT:**

Tape the screwdriver tip before use.

### 3. REMOVE QUARTER TRIM

Remove the quarter trim by pulling it.

### 4. REMOVE PACKAGE TRAY TRIM SIDE COVER

### 5. REMOVE ROOF SIDE INNER GARNISH

- (a) Remove front seat belt floor anchor and shoulder anchor.

**Torque: 41 N·m (420 kgf-cm, 30 ft-lbf)**

- (b) Remove rear seat belt floor anchor.

**Torque: 41 N·m (420 kgf-cm, 30 ft-lbf)**

- (c) Remove the clip.
- (d) Remove the garnish by pulling it.

### 6. REMOVE THESE PARTS:

- (a) Sunshade trim
- (b) Removable roof panel
- (c) Opening trim
- (d) Lock garnish and lock base

### 7. REMOVE ROOF HEADLINING