

## REMOVAL

### 1. REMOVE RIGHT FRONT FENDER LINER

### 2. REMOVE CONTROL RELAY

- (a) Disconnect the 2 connectors from the relay.
- (b) Remove the relay from the clamp.

### 3. DISCONNECT BRAKE LINES

Using SST, disconnect the brake lines from the ABS actuator.

SST 09023-00100

**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

### 4. REMOVE ABS ACTUATOR ASSEMBLY

- (a) Disconnect the 2 connectors.
- (b) Remove the 2 bolts, nut and ABS actuator assembly.

**Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)**

### 5. REMOVE ABS ACTUATOR

- (a) Remove the 3 nuts and ABS actuator from actuator bracket.

**Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)**

- (b) Remove the 3 holders and cushions from the ABS actuator.

