



REMOVAL

1. REMOVE MASTER CYLINDER (See page [BR-10](#))
 2. DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER
 3. REMOVE PEDAL RETURN SPRING
 4. REMOVE CLIP AND CLEVIS PIN
 5. REMOVE BRAKE BOOSTER, GASKET AND CLEVIS
- (a) Remove the No.1 brake line clamp.

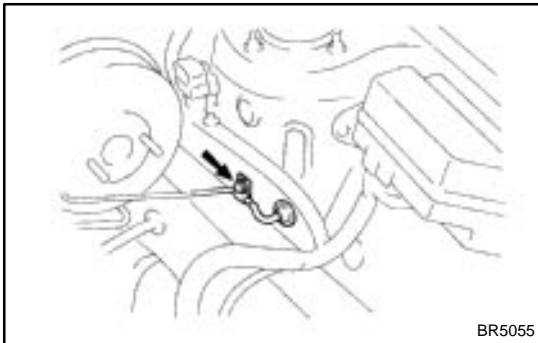

- (b) Remove the No.2 brake line clamp.

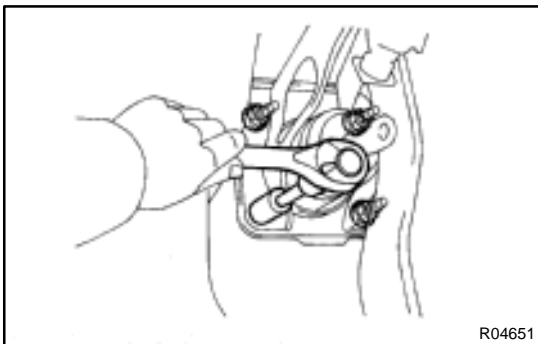

- (c) Remove 4 nuts and clevis.
- (d) Pull out the brake booster and gasket.