



REMOVAL

1. REMOVE FRONT WHEEL

2. DISCONNECT FLEXIBLE HOSE

- (a) Remove the union bolt and 2 gaskets from the caliper, then disconnect the flexible hose from the caliper.

Torque: 30 N·m (310 kgf-cm, 22 ft-lbf)

HINT:

At the time of reassembly, please refer to the following item.
Install the flexible hose lock securely in the lock hole in the caliper.

- (b) Use a container to catch the brake fluid as it drains out.

3. REMOVE CALIPER

- (a) Remove the 2 installation bolts.

Torque: 25 N·m (255 kgf-cm, 18 ft-lbf)

- (b) Remove the caliper from the torque plate.

4. REMOVE 2 BRAKE PADS WITH ANTI-SQUEAL SHIMS

5. REMOVE 4 PAD SUPPORT PLATES