


REMOVAL

1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the fender liner.
- (b) Disconnect the speed sensor connector.

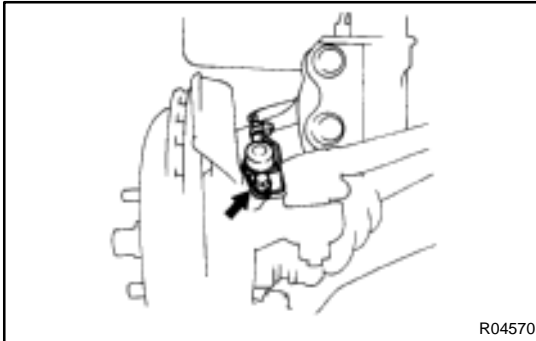

2. REMOVE SPEED SENSOR

- (a) Remove the clip and 2 clamp bolts holding the sensor harness to the body and shock absorber.

Torque: 5.0 N·m (55 kgf·cm, 48 in.-lbf)

- (b) Remove the speed sensor from the steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)