



DISASSEMBLY

DISASSEMBLE WHEEL CYLINDER

- (a) Remove the 2 boots.
- (b) Remove the 2 pistons with piston cups.
- (c) Remove the spring.