


R04572

## REMOVAL

### 1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the rear seat cushion.
- (b) Disconnect the speed sensor connector, and pull out the sensor wire harness with the grommet.

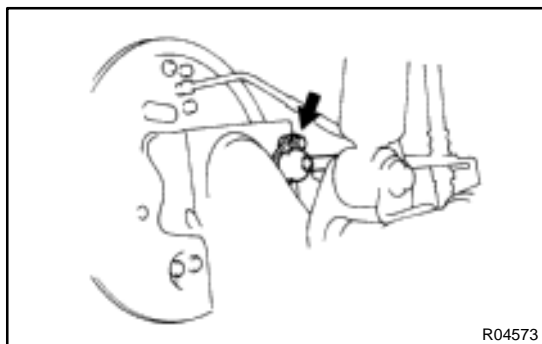

R04573

### 2. REMOVE SPEED SENSOR

- (a) Remove the 3 clamp bolts holding the sensor wire harness to the axle beam.

**Torque: 5.0 N·m (55 kgf·cm, 48 in.-lbf)**

- (b) Remove the speed sensor from the axle beam.

**Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)**