


## REMOVAL

### 1. DISCONNECT CONNECTOR AND WIRE FROM GENERATOR

- Disconnect the connector from the generator.
- Remove the connector cover and nut, and disconnect the wire from the generator.

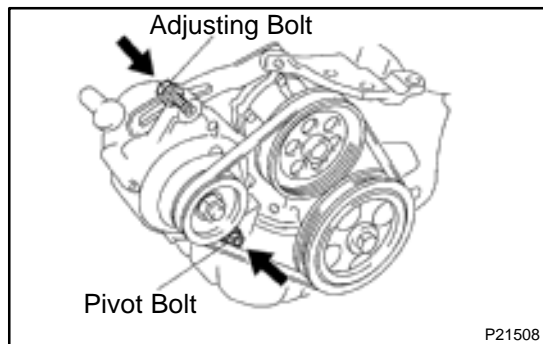

### 2. REMOVE DRIVE BELT

Loosen the pivot bolt and adjusting bolt, and remove the drive belt.

#### Torque:

**Pivot bolt: 58 N·m (580 kgf·cm, 41 ft·lbf)**

**Adjusting bolt: 12 N·m (120 kgf·cm, 9 ft·lbf)**

### 3. REMOVE GENERATOR

- Remove the pivot bolt, nut and adjusting bolt.
- Remove the generator.