

REMOVAL

1. REMOVE TRANSAXLE FROM ENGINE


(See page [MX-3](#))

2. REMOVE CLUTCH COVER AND DISC

- Place matchmarks on the flywheel and clutch cover.
- Loosen each set bolt one turn at a time until spring tension is released.
- Remove the set bolts, and pull off the clutch cover with the clutch disc.

NOTICE:

Do not drop the clutch disc.

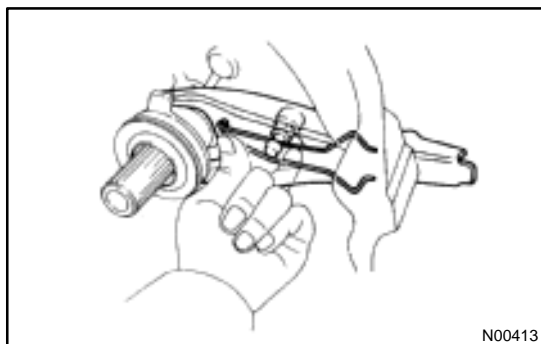

3. REMOVE RELEASE BEARING AND FORK FROM TRANSAXLE

Remove the release bearing together with the fork and then separate them.