



REMOVAL

1. **DRAW OUT FLUID WITH SYRINGE**

2. **DISCONNECT CLUTCH LINE**

Using SST, disconnect the line. Use a container to catch the fluid.

SST 09023-00100

Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)

3. **REMOVE CLIP AND CLEVIS PIN**

4. **REMOVE 2 MOUNTING NUTS AND PULL OUT MASTER CYLINDER**

Torque: 12 N·m (120 kgf-cm, 9 ft-lbf)