



DISASSEMBLY

1. **PULL OUT BOOT WITH PUSH ROD**
2. **REMOVE PISTON**

Using compressed air, remove the piston with the spring from the cylinder.