


COOLING FAN RELAY INSPECTION


COOHO-02

1. INSPECT NO.1 COOLING FAN RELAY


- Remove the relay box cover.
- Remove the No.1 cooling fan relay. (Marking: FAN)

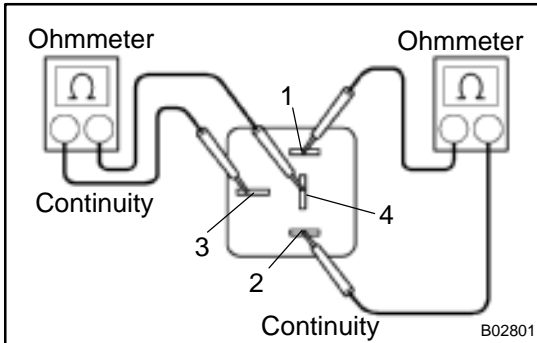

- Inspect the No.1 cooling fan relay continuity.
 - Using an ohmmeter, check that there is continuity between terminals 1 and 2.
 If there is no continuity, replace the relay.
 - Check that there is continuity between terminals 3 and 4.
 If there is no continuity, replace the relay.

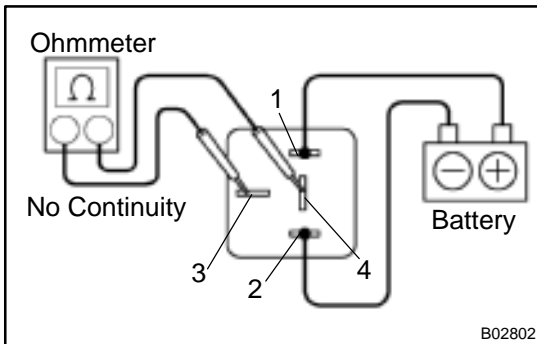


- Inspect the No.1 cooling fan relay operation.
 - Apply battery positive voltage across terminals 1 and 2.
 - Using an ohmmeter, check that there is no continuity between terminals 3 and 4.
 If there is continuity, replace the relay.
- Reinstall the No.1 cooling fan relay.
- Reinstall the relay box cover.

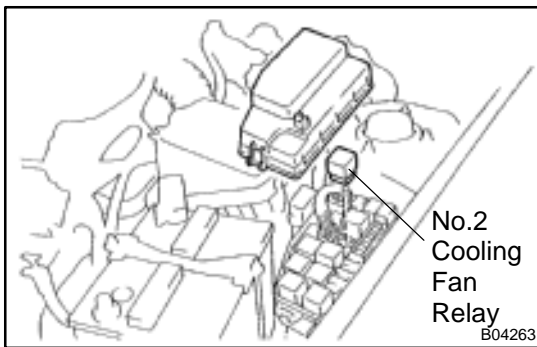


2. INSPECT NO.2 COOLING FAN RELAY


- Remove the relay box cover.
- Remove the No.2 cooling fan relay. (Marking: FAN No.2)

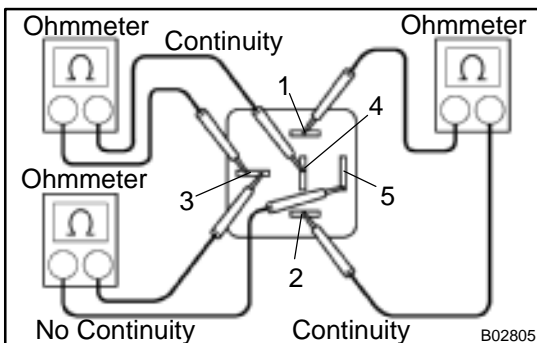

- Inspect the No.2 cooling fan relay continuity.
 - Using an ohmmeter, check that there is continuity between terminals 1 and 2.
 If there is no continuity, replace the relay.
 - Check that there is continuity between terminals 3 and 4.
 If there is no continuity, replace the relay.
 - Check that there is no continuity between terminals 3 and 5.
 If there is continuity, replace the relay.

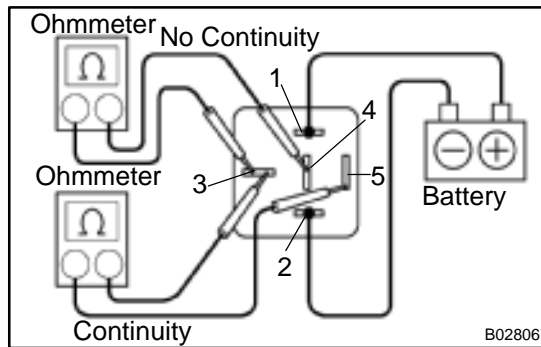


- (d) Inspect the No.2 cooling fan relay operation.
- (1) Apply battery positive voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is no continuity between terminals 3 and 4.
- If there is continuity, replace the relay.
- (3) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
- If there is no continuity, replace the relay.
- (e) Reinstall the No.2 cooling fan relay.
 - (f) Reinstall the relay box cover.

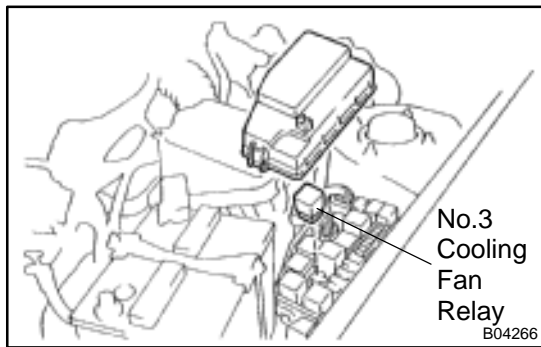


3. INSPECT NO.3 COOLING FAN RELAY

- (a) Remove the relay box cover.
- (b) Remove the No.3 cooling fan relay. (Marking: FAN No.3)

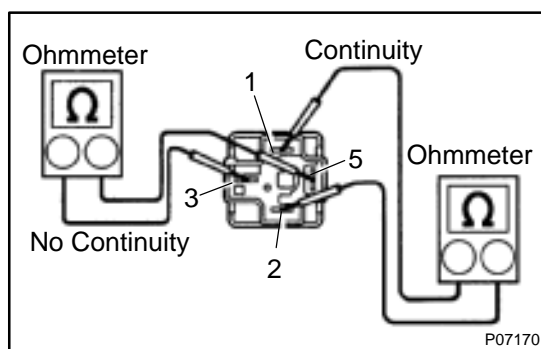

- (c) Inspect the No.3 cooling fan relay continuity.
- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- If there is no continuity, replace the relay.
- (2) Check that there is no continuity between terminals 3 and 5.
- If there is continuity, replace the relay.

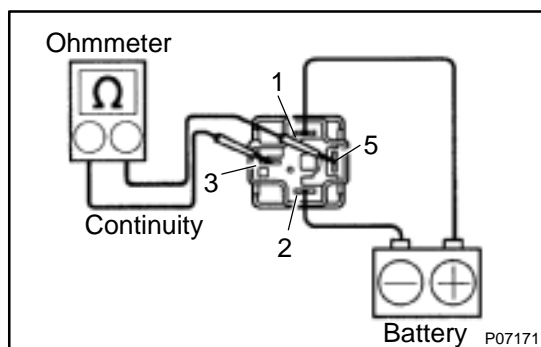

- (d) Inspect the No.3 cooling fan relay operation.
- (1) Apply battery positive voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
- If there is no continuity, replace the relay.
- (e) Reinstall the No.3 cooling fan relay.
 - (f) Reinstall the relay box cover.