


## DISASSEMBLY

### 1. DISASSEMBLE NO.1 COOLING FAN

- (a) Remove the nut and fan.
- (b) Remove the fan motor.
  - (1) Disconnect the wire and connector holder from the fan shroud.
  - (2) Remove the 3 screws and fan motor.

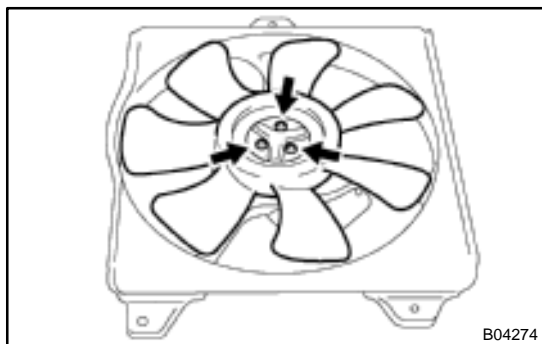

### 2. DISASSEMBLE NO.2 COOLING FAN

- (a) Remove the 3 screws and fan.
- (b) Remove the screw and fan motor cover.
- (c) Remove the fan motor.
  - (1) Disconnect the wire and connector holder from the fan shroud.
  - (2) Remove the 3 screws and fan motor.